
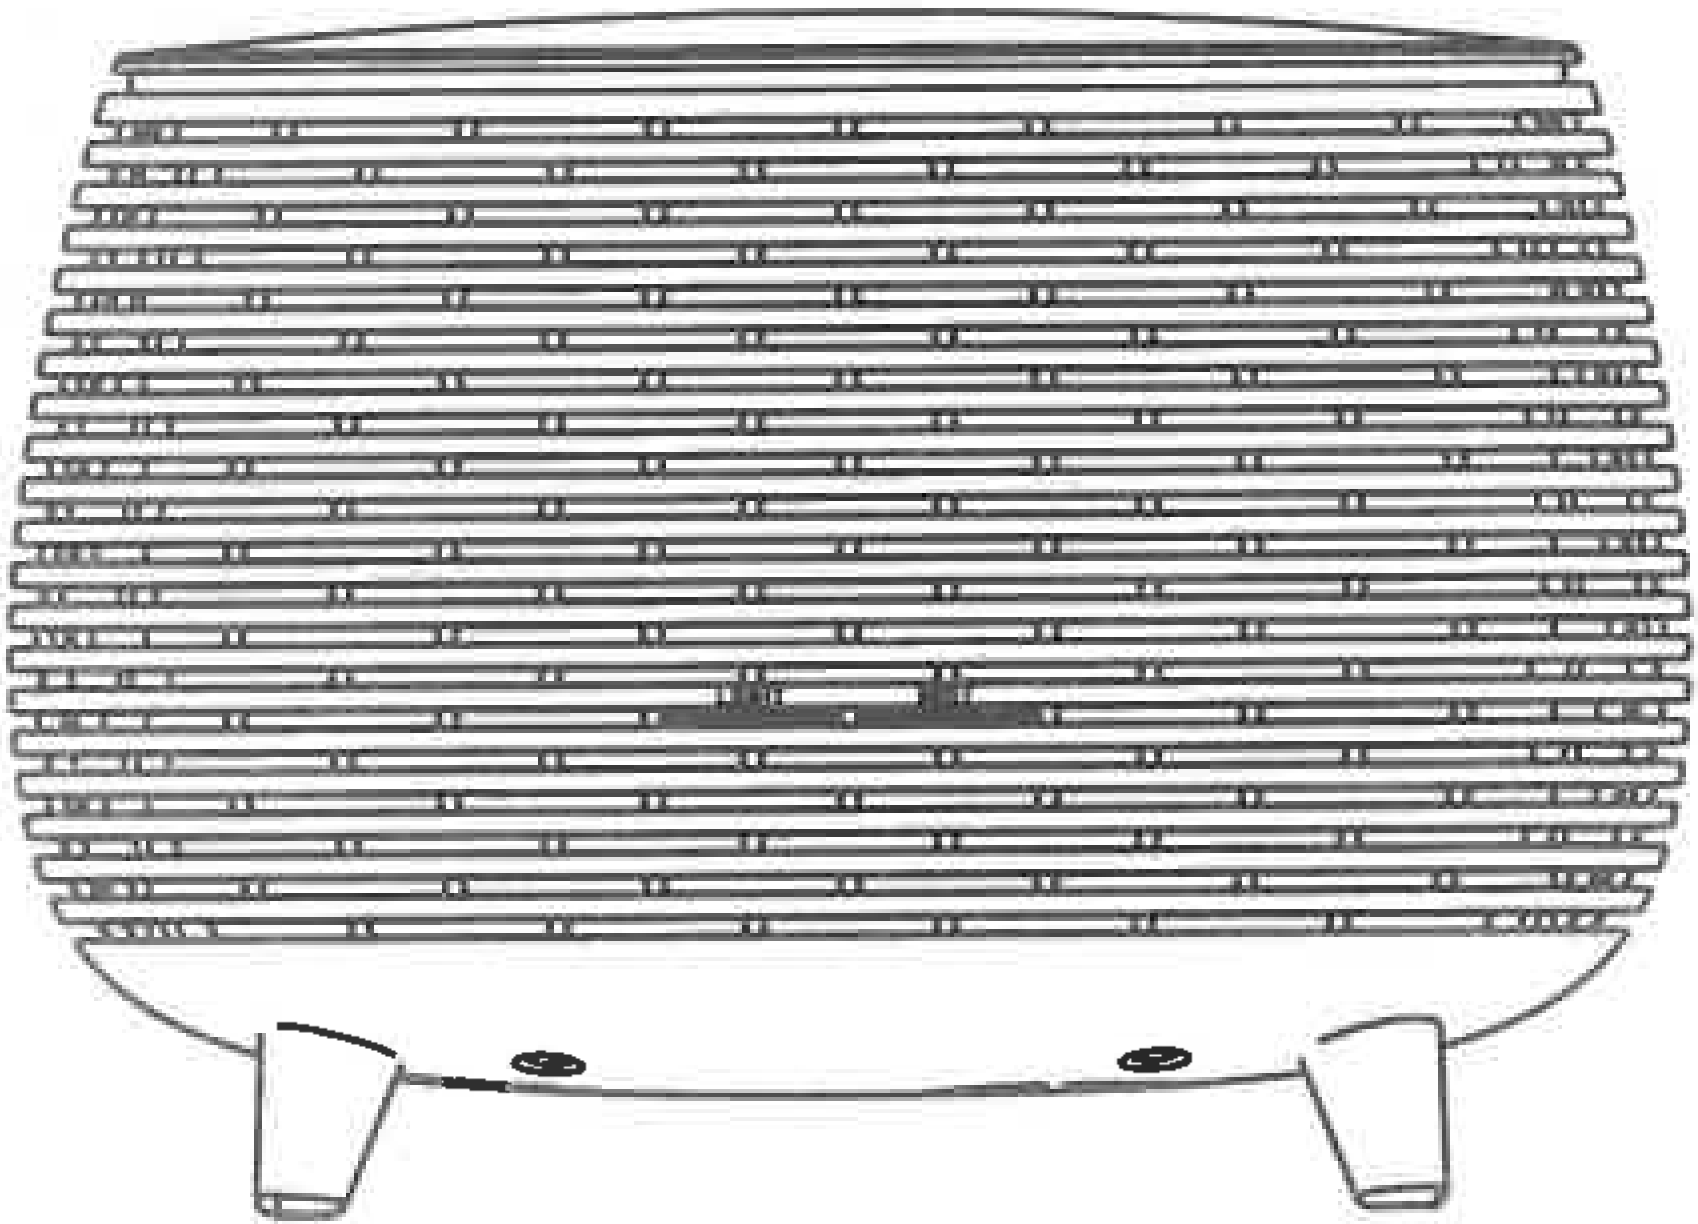


INSTRUCTION MANUAL

SPECIFICATION

Product size: 20 x 13.5 x 14.3cm
Input/Output: AC100-240V
Frequency: 50/60hz
Voltage: DC24V 500mA
Power: 6.5W
Time Mode: 1H/3H/6H ON
Tank Capacity: 400ml
LED Light: 7 bulbs
Material: ABS+PP
Accessories: AC adaptor, remote control and manual
Method of mist production: 2.4Mhz

OPERATION

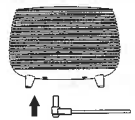

❶ Connect the DC port to the DC slot of the base.



❷ Take off the cover.




❸ Add water into the tank, don't exceed the max 400ML.



❹ Add some essential oils into the water(2-3 drops per 100ML)



❺ Re-install the cover.



❻ Connect the AC adaptor to the power socket.

❼ MIST:
First press,the unit enters into continuous mist mode.
Second press, the unit enters into intermittent mist mode.(work 30s, stop 30s, recycle)
Third press, turn off the unit.(Long press 2s can turn off the unit at any mode.)



❽ LIGHT:
First press, turn on the light and there are 7 colors changing automatically.
Second press, pause on current color.
Third press,changing the light color,press again,the current light become darker.
When the unit is turned off,the lights will be turned on alone after pressed the LIGHT button.

MAINTENANCE


After using 3-5 days or 5-6 times, Please clean the product as follow:


- Unplug the unit from power supply and remove cover.
- Pour out any remaining water from the tank.
- Add small amount of Kitchen detergent / mild detergent with water.
- Leave for 5 minutes and drain the solution.
- Wipe with soft cloth. Avoid ultrasonic vibration plate area, which can be gently cleaned with a cotton buds.


Note: Never use other acids, enzymes or detergent, as it may risk poisonous gas to be created or cause malfunction

PRODUCT DESCRIPTION



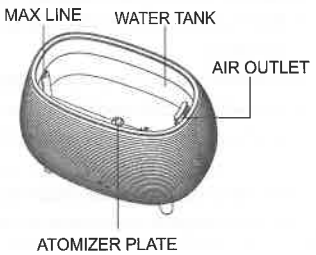

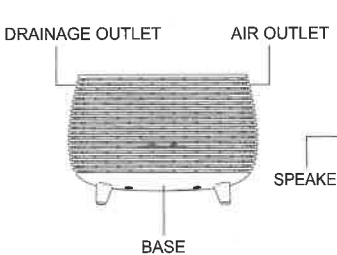

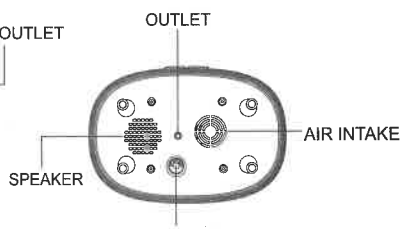


REMINDERS

- Please use other container to add water. Don't fill in the tank from water-tap directly.
- Pure essential oils or oils which can be soluble into water are available for use. Please clean the unit as per the maintenance instructions before changing a new type of essential oil.
- It is quite normal that different humidity environment and temperature will affect the mist density.
- Do not let the mist spray to the furniture, clothes, wall directly.
- The essential oils may cause dye. Please use clean cloth wipe up if splashed out accidentally.
- To ensure the sanitation, please pour out the water completely and wipe up the unit with soft cloth after each use.
- If you don't use the unit for a long time, please pour out any remaining water completely in the tank and store it at dry place.
- When the power connects, the unit original state is OFF.
- If there is short of water in the tank, even though the power connects, the unit will shut automatically. Meanwhile , all function will be off.

TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE	SOLUTION
Power On is not working	• Not enough water in the tank • Power cord not connected properly	• Add water to the tank • Disconnect, check cables and re-connect carefully.
No mist or abnormal mist	• Not enough water • Too much water • Dirt on the untrasonic plate • Cover and inner cover are not installed properly • Dirt in the air suction	• Add a suitable amount of water in the tank • Water must never be filled over 400ml. (MAX) line. • Remove and reinstall correctly. • Clean the air suction port of any dust.
Water leakage from product	• Cover is not installed properly • Unit has been tipped over • Low temperature of high humidity	• Remove and reinstall correctly, so vapors can be released freely. • Under these conditions, the mist may condense quickly into water droplets.

REMOTE CONTROL INSTRUCTION

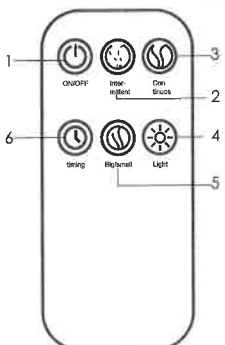

1	ON/OFF	POWER SWITCH
2	INTERMITTENT	10 Seconds interval mist
3	CONTINUOUS	Continuous Mist
4	LIGHT	Press LIGHT button once to turn on the color changing light. Press again to select your desired fixed color on level 2 brightness. Press again to choose other colors on Level 1 or Level 2 brightness.
5	BIG/SMALL	Heavy / Light Mist
6	TIMER	1hr/ 3hr / 6hr timer