Salt Lamp Flame Aromatherapy Machine User Manual



Operation steps

1. Keep the product upright and remove the cover in a vertical direction Figure 1
2. Please connect the USB cable to the bottom TYPE-C of the host Jack. Figure 2
3. Please use a measuring cup to take water from the water pipe (do not add high-temperature water): Pay attention to the full water level; Do not exceed the maximum line and do not add water while working. Place the essential oil vertically into the water tank. Figure 3
4. Please place the lid vertically on the machine body. When you want to use the product, you must cover it. Figure 4
5. Place the salt stone into the flame disperser. Figure 5
6. Switch button (left)
Press the first button to activate the atomization function, and at the same time, the top fog light will turn on
Press the second button: Turn off the flame lamp
Press the third button to turn off the atomization function
Timer button (left)
First button: Set 1-hour timer
Second button: Set 3-hour timer
Third button: Set 6-hour timer
Fourth button: Set the on mode,
LED light switch button (on the right)
First button: Turn on the bottom salt light
Press the second to eighth buttons to activate the racing light mode
The 9th to 14th buttons: Turn on the colorful light mode
15th to 22nd button: Activate the color light selection mode
*Long press function: Long press for three seconds to turn off the salt lamp light, long press for the second time to turn off the colorful light as shown in Figure 6
Attention: The machine will automatically shut down after the water is used up.




Fig1


Fig2


Fig3


Fig4




Fig5

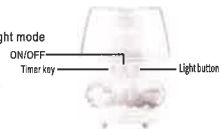


Fig6

Preventive measure

Please check the following to avoid any malfunctions:
*It is recommended to use a maximum of 240 milliliters of water.
*Do not turn on the power when the water tank is empty.
*Do not touch the ultrasonic vibration board.
*Regularly clean according to maintenance instructions to avoid malfunctions.
Please make sure to unplug the power before maintenance.
For hygiene reasons, discard the remaining water on the 'drainage side'.
After using the water tank, wipe it with a clean dry cloth.
Essential oils can stain, once they come into contact, please wipe them off with a soft cloth.
Only use a measuring cup (not provided) to add water to the water tank, do not directly pour water from the water pipe.

When the product runs abnormally, please refer to the following table:

If the product is not functioning properly, please refer to the following points before requesting repair:	
Cannot open or close	Is there enough water in the water tank? --Please fill the water tank with water to the appropriate level •Is the power cord connected correctly? --Please disconnect, check and reconnect carefully
No fog or abnormal fog	Lack of water? Or too much water? Please add an appropriate amount of water to the water tank, which should not exceed 240ML (maximum). Is there dirt on the ultrasonic board? Please refer to the maintenance instructions for proper disassembly and reinstallation, so that steam can be released freely Is the installation of the lid and inner lid incorrect? Is there any dirt on the suction port on the bottom of the base? If there is too much dust at the suction port, the mist will be restricted. Just need to clean it.
Product leakage	Is the lid and internal installation incorrect? --Correctly disassemble and reinstall to allow steam to be released freely. Low temperature or high humidity? In this case, the mist will quickly condense into water droplets.

Product parameters

Product Name: Salt Lamp Flame Aromatherapy Machine	
Product model:	ZJ-121
Water capacity:	240ml
Sprav amount:	25-30ml/H
Net weight:	900g
Material:	ABS+PC+PP
Working current:	1.5A
Service power:	5W
Rater Power:	TYPF-C/5V