
Jellyfish Aroma Diffuser

INSTRUCTIONMANUAL

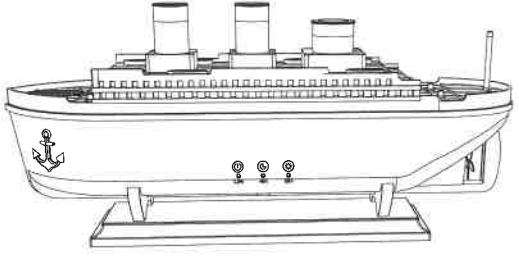

USER MANUAL


Thank you for purchasing this product, please read the instruction manual carefully before using this product

PRODUCT SPECIFICATION

Product name: Jellyfish Aroma Diffuser
Power supply:DC 24V/650MA
Product size:30x7.1x14.1CM
Material: ABS+PP
Origin:China

Product model: 299
Net weight:420G
Water tank: 250ml
Spray volume:10-30ml/H
Executive standard:
GB 4706.1-2005
GB 4706.48-2009

PRODUCT DIAGRAM

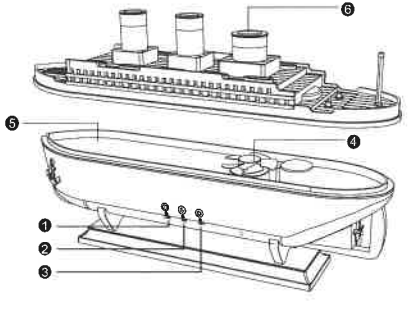

❶ power button
❷ Timing button
❸ Light button
❹ Fan
❺ Water Tank
❻ Spray Port

PACKAGE CONTAINS

One humidifier, one instruction manual, Remote control, adapter

KEY FUNCTION

Key 1	Short press the first time, the default golden light, the regular spit circle, no timing
	Short press the second time, golden light, normal spray mode
	Press it a third time to power off
Key 2	The button is valid when the system is started. By default, the system is ON
	Short press the first time, timed 4H shutdown, 4H indicator light
	Short press the second time, timed 8H shutdown, 8H indicator light
	Short press the third time to cancel the timing, and the ON indicator will light up, so as to switch the cycle
Key 3	The button is valid in the startup state, and the default color is golden yellow
	Short press to switch the light, color gradient - fixed color - color gradient cycle
	Press and hold to turn off the light
buzzer	1. Every time you touch the button, there is a drop prompt
	2, periodic cycle to ON/atomized shutdown/off light file for two drops
	3, no water shutdown machine buzzer drops three sound off

MAINTENANCE

After using 5-6 times, or 3-5 days, please clean the product as follow:

1.Unplug the unit from mains supply and remove cover.
2.Pour out any remaining water from the tank.
3.Add a smell amount ofwarm kitchen cletergent remover and water,use swab to wipe it gerntly,and then use cleaning cloth to dry it lightly.
4.Do not use other acids or enzymes detergents,as this may give o poisonous gas or cause malfunction.

Note:Be sure to use a mild detergent.

PRECAUTIONS

Please check below to avoid malfunction of the unit:

- Do not ll over 250ML"MAX"at any time.
- Do not switch on power when the tank is empty.
- Do not touch the Ultrasonic vibration plate.
- Clean regularly as per Maintenance instructions to aviod malfunction.
- Always unplug from power supply before maintenance.
- For hygiene reasons,after use,pour away remaining water from"DRAIN SIDE"of tank, and wipe with a clean dry cloth.
- Essential oils can stain,In the event of spillage of contact,please wipe away with asoft cloth.
- Only use the measuring cup(not provided) to add water into the tank,do not ll waterdirectly from the water pipe.
- Do not let mist below onto furniture,clothing,walls etc.
- Keep away from directing sunshine heat sources and air conditioners of fans.
- Always keep on stable plat surface do not place on carpet,duvet or unstable area.
- Keep away from electronic equipment,such as TV and Auto equipment.
- Do not tip the product this may cause water to enter the mechanism and cause malfunction.
- Product use time: 8hours.
- Wait 60 minutes before restart to avoid damage to Ultrasonic plate.
- Use tap water only,does not use mineral water,sparking water etc.
- Never move product in use.
- Do not touch any part of the product with wet hands.
- Keep out of reach of children and pets,Children not being supervised are suggesetd notplay with the product.Appliance is not suitable for children or person with reducedphysical,sensory or mental capabilities,or lack of experience and knowledge to beused,unless they have been given supervision or instruction.
- Keep cord clear of pathways,and do not pull forcefully at any point.
- If smoke or burning smell is detectd,unplug immediately.

TROUBLESHOOTING

Please refer to the table below in the event of the product operatingabnormally:

If product doesn't work well,please refer to the following pointsbefore requesting repairs:	
Wil not switchon or switch o	•Is there enough water in the tank? •Please add water to the tank •Is the power cord connected property? --Please disconnect,check cables and re-connect carefully. •Not enough water?or too much water? -Please add suitable amount of water in the tank, water mustnever be lled over 250ml"MAX"line.
No mist or abnormal mist	•Dirt on the ultrasonic plate? --Please refer to maintenance instructions remove and re-instal! correctly,so vapors can be released freely. •Cover and inner cover are not installed properly?Dirt on the airsuction port on the underside of the base? --If too much dust in the air suction port,the mist will berestricted to come out,Just clean it.
Water leakage from product	•Cover and inner are not installed properly? --Remove and reinstall correctly,so vapors can be released freely. •Low temperature or high humidity?--Under these conditions, the mist may condense quickly intowater droplets.